


## Basic user instructions for 2LPAPS 2 Litre Pump Action Pressure Sprayer

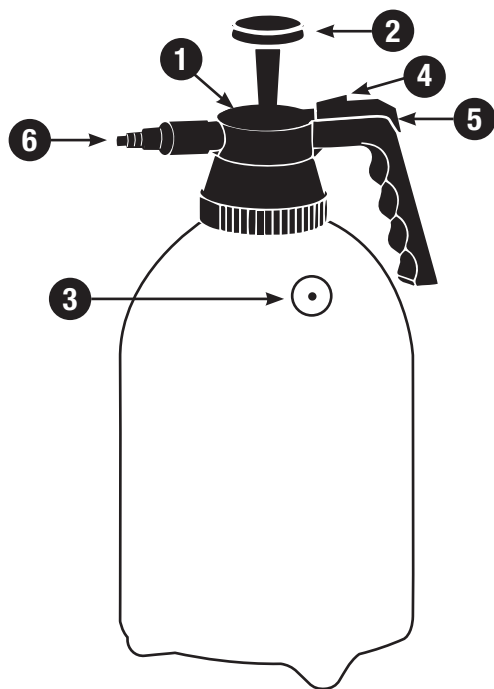

### Parts List

- |                 |                 |
|-----------------|-----------------|
| 1. Sprayer Head | 4. Trigger Lock |
| 2. Pump         | 5. Trigger      |
| 3. Safety Valve | 6. Brass Nozzle |

- Unscrew the sprayer head in an anticlockwise direction.
- Fill the bottle to the 'max fill' line as shown on the bottle.
- Screw the sprayer head back on to the bottle in a clockwise direction.
- Pump the sprayer about 25 times.
- The safety valve will leak if the air pressure is too high. Do not overfill with air or liquid.
- Ensure that the sprayer trigger lock is disengaged by pressing the lock downwards, away from the pump.
- The sprayer will work when the sprayer trigger is unlocked and pressed down.
- Sprayer output can be adjusted from strong jet to soft mist by twisting the brass nozzle as applicable.
- The trigger can be pressed down and locked in to place for continuous spray.
- At end of use, release pressure from the bottle by slowly pulling the safety valve (you should hear the air release from the bottle).
- To empty the bottle, unscrew the sprayer head and empty as applicable.