



Pressure Sprayer Trouble Shooting Guide

Problem	Cause	Resolution
1. Can't open sprayer to fill with water	Red collar locked in place	Undo red collar (Anti-clockwise) and re-tighten
2. Can't raise the handle grip	Handle in locked position	Rotate blue grip anti clockwise to unlock
3. Once filled - no pressure when pumping	One or more components not fully tightened Open pressure release valve Trigger on wand in open position	Check all parts are correctly tightened - top collar - hose collar - pressure release valve Check trigger is closed (not locked in open position)
4. Won't spray/low output	Blocked nozzle Split pipe Loose fittings Internal filter blocked	Detach nozzle for cleaning (soak in warm water) Check pipe for leaks Tighten all components Loosen tube collar on top shoulder of sprayer, remove tube and check small filter - soak in warm water for cleaning
5. Rapid loss of pressure	Damaged or misplaced seals Small leaks	Check all seals are in place and undamaged - replace seal
6. Unable to adjust spray pattern	End nozzle blocked/stuck in position	Remove nozzle and soak in warm water to clean
7. Won't turn off	Trigger in locked position	Trigger is unlocked by pushing down trigger and pulling back